


11/9/2007
10:29 AM

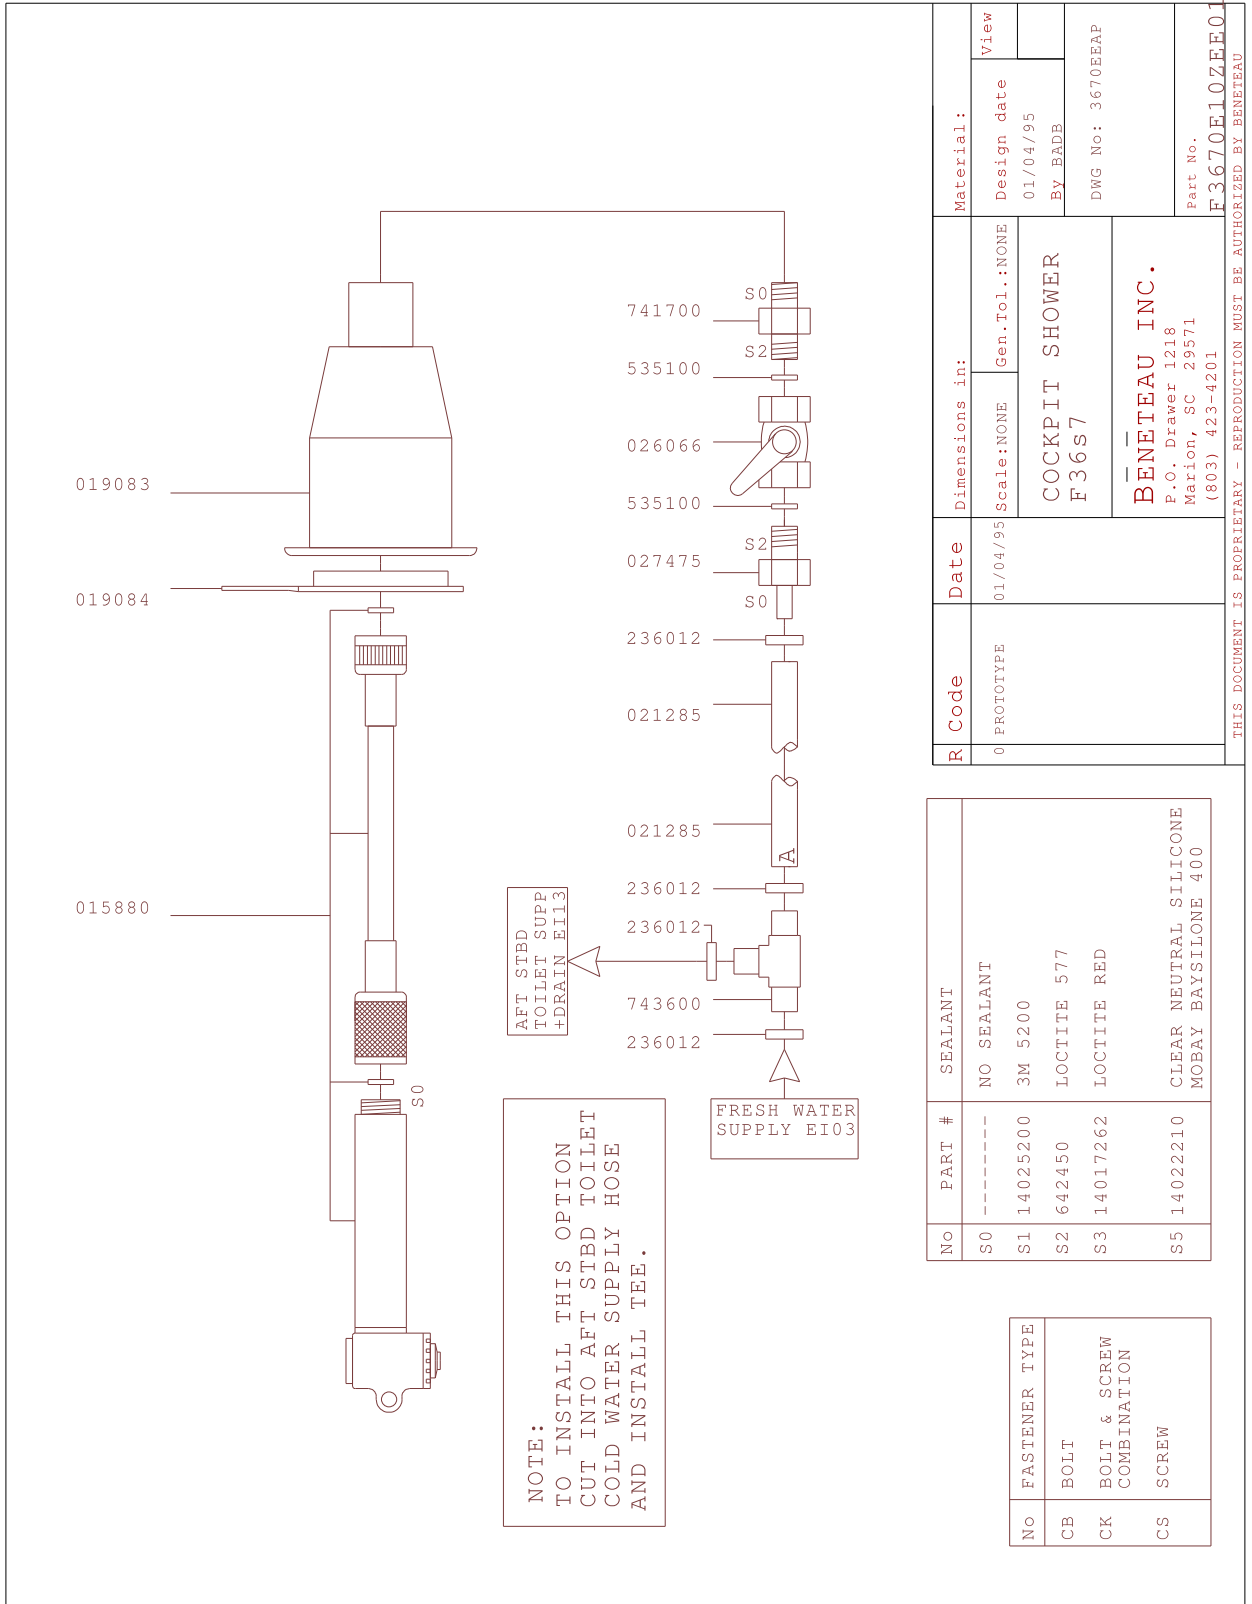

NOTE:
TO INSTALL THIS OPTION
CUT INTO AFT STBD TOILET
COLD WATER SUPPLY HOSE
AND INSTALL TEE.

AFT STBD
TOILET SUPP
+DRAIN EI13

FRESH WATER
SUPPLY EI03

R Code	Date	Dimensions in:	Material:
0 PROTOTYPE	01/04/95	Scale: NONE Gen. Tol.: NONE	Design date 01/04/95 BY BADB
		COCKPIT SHOWER F36S7	DWG No: 3670EEAP
		BENETEAU INC. P.O. Drawer 1218 Marion, SC 29571 (803) 423-4201	Part No. F3670E10ZE01

No	PART #	SEALANT
S0	----	NO SEALANT
S1	14025200	3M 5200
S2	642450	LOCTITE 577
S3	14017262	LOCTITE RED
S5	14022210	CLEAR NEUTRAL SILICONE MOBAY BAYSLONE 400

No	FASTENER TYPE
CB	BOLT
CK	BOLT & SCREW COMBINATION
CS	SCREW

THIS DOCUMENT IS PROPRIETARY - REPRODUCTION MUST BE AUTHORIZED BY BENETEAU